

Lucas Handlebar Switches

Function	Wire Colour	Action
Start	WHT/RED	Pulls up starter, needs ignition live feed WHT
Engine Kill	WHT/YLW	Breaks live ignition from WHT
	WHT	Supply from Ignition switch.
Indicators	LGHT GRN/BRN	Supply to switch from indicator relay.
Right Indicator	GRN/WHT	To Right lamps X2
Left Indicator	GRN/RED	To Left lamps X2
Dip switch	BLU	Feed wire
	BLU/WHT	Headlamp Main
	BLU/RED	Headlamp Dip
Flash	(BLU/WHT)	Needs Live Ignition feed WHT
Horn	PPL/BLK	Live feed if WHT is fed from Ignition
	WHT	Supply from Ignition switch.